Advanced Card Systems Ltd.

ACR30 Smart Card Reader/Writer (w/ Card Eject)

APPLICATION PROGRAMMING INTERFACE

Version 2.5 11-2005

Unit 1008, 10th Floor, Hongkong International Trade and Exhibition Centre
1 Trademart Drive, Kowloon Bay, Hong Kong
Tel: +852 2796 7873 Fax: +852 2796 1286 Email: info@acs.com.hk Website: www.acs.com.hk

Contents

1. Introduction 3
2. ACR30 4
2.1 Overview 4
2.2 Communication Speed 4
3. ACR30 API 5
3.1 Interface Data Structure 5
3.1.1 AC_APDU 5
3.1.2 AC_SESSION 6
3.1.3 AC_INFO 6
3.2 Interface Function Prototypes 8
3.2.1 AC_RescanBus 8
3.2.2 AC_Open 8
3.2.3 AC_Close 9
3.2.4 AC_StartSession 10
3.2.5 AC_EndSession 11
3.2.6 AC_ExchangeAPDU 12
3.2.7 AC_GetInfo 13
3.2.8 AC_SetOptions 14
3.3 ACI Commands 16
3.3.1 AC_GPM103 / AC_SLE4406 / AC_SLE4436 / AC_SLE5536 16
3.3.1.1 ACI_Read 16
3.3.1.2 ACI_Write 16
3.3.1.3 ACI_WriteCarry 16
3.3.1.4 ACI_Verify 17
3.3.1.5 ACI_Authenticate (For SLE4436 and SLE5536) 17
3.3.2 AC_I2C_1K_16K / AC_I2C_32K_1024K 18
3.3.2.1 ACI_Read 18
3.3.2.2 ACI_Write 18
3.3.3 SLE4418 / SLE4428 18
3.3.3.1 ACI_Read 18
3.3.3.2 ACI_Write 19
3.3.3.3 ACI_WritePr 19
3.3.3.4 ACI_Verify [SLE4428 Only] 19
3.3.4 SLE4432 / SLE4442 20
3.3.4.1 ACI_Read 20
3.3.4.2 ACI_Write 20
3.3.4.3 ACI_WritePr 20
3.3.4.4 ACI_Verify [SLE4442 Only] 21
3.3.4.5 ACI_ChangePIN [SLE4442 Only] 21
Appendix A: Table of error codes 22

© Advanced Card Systems Ltd.

1. Introduction

This manual describes the use of ACR30 interface software to program the ACR30 smart card readers. It is a set of library functions implemented for the application programmers to operate the ACR30 smart card readers and the inserted smart cards. Currently, it is supplied in the form of 32-bit DLL (for Windows 95/98/NT). It can be programmed using the popular development tools like Visual C/C++, Borland C/C++, Visual Basic, Delphi, FoxPro, etc.

Depending on the reader model, ACR30 series of smart card readers can be connected to the PC via the RS/232 interface or USB interface. The connecting interfaces of different model of readers are summarized as follows:

Model Numbers	Connecting interface
ACR30S, ACR30S-S	Serial RS/232
ACR30U	USB interface

Even though the hardware communication interface can be different, application programs can still use the same API (Application Programming Interface) for operating the smart card readers. Actually, the purpose of using the ACR30 library is to provide the programmer with a simple and consistent interface over all possible hardware. It is the responsibility of the ACR30 library to handle the communication details, parameter conversions and error handling. The architecture of the ACR30 library can be visualized as the following diagram:

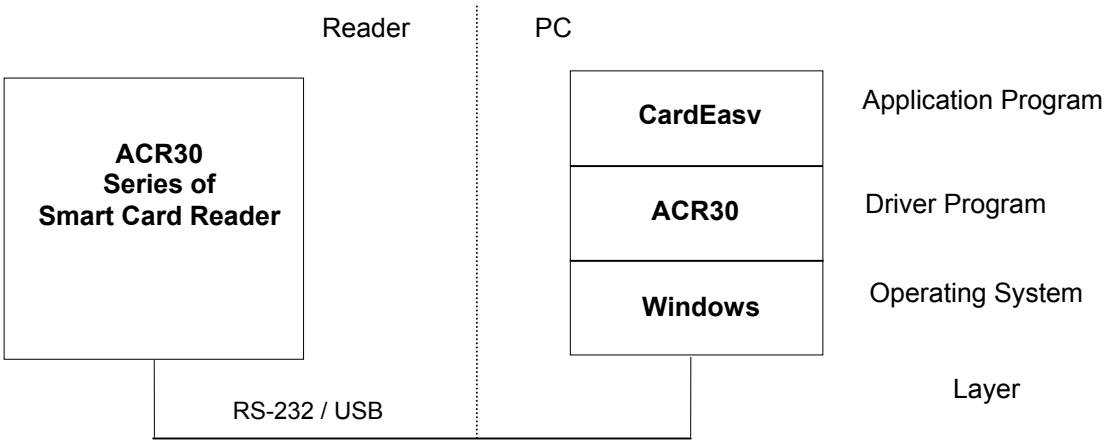

Figure 1.1

2. ACR30

2.1 Overview

ACR30 is a set of high-level functions provided for the application software to use. It provides a consistent application programming interface (ACR30 API) for the application to operate on the card reader and the corresponding inserted card. ACR30 communicates with the ACR30 reader via the communication port facilities provided by the operating system. ACR30 is supposed to be platform independent provided that there is a minor modification on the communication module of the ACR30 to adapt to different operating environments.

2.2 Communication Speed

The ACR30 library controls the communication speed between the reader and the PC. For those readers using the serial RS232 connection, the default communication baud rate (factory setting) is 9600bps, no parity, eight bits and one-stop bits. A higher speed of 115200bps can be achieved by using software command issuing from the host. Please notice that the above communication speed setting applies only on those readers using the RS232 connection. For the USB type of connection, the speed is fixed at 9600bps and 1.5Mbps respectively.

© Advanced Card Systems Ltd.

3. ACR30 API

The ACR30 Application Programming Interface (API) defines a common way of accessing the ACR30 reader. Application programs invoke ACR30 through the interface functions and perform operations on the inserted card through the use of ACI commands. The header file ACR30.H, which contains all the function prototypes and macros described below, is available for the program developer.

3.1 Interface Data Structure

The ACR30 API makes use of several data structures to pass parameters between application programs and the library driver. These data structures are defined in the header file ACR30.H and they are discussed below:

3.1.1 AC_APDU

```
typedef     struct {
      BYTE          CLA;
      BYTE          INS;
      BYTE          P1;
      BYTE          P2;
      INT16         Lc;
      INT16         Le;
      BYTE          DataIn[256];
      BYTE          DataOut[256];
      WORD16        Status;
} AC_APDU;
```

The AC_APDU data structure is used in the AC_ExchangeAPDU function for the passing of commands and data information into the smart card. For memory card operation, please refer to section **3.3** for the definition of fields' value. For MCU card (T=0,T=1) operation, these values are specific to the smart card operating system. You must have the card reference manual before you can perform any valid operations on the card. Please notice that Lc represents the data length going into the card and Le represents the data length expecting from the card.

Name	Input/Output	Description
CLA	I	Instruction Class
INS	I	Instruction Code
P1	I	Parameter 1
P2	I	Parameter 2
Lc	I	Length of command data (DataIn)
Le	I/O	Length of response data (DataOut)
DataIn	I	Command data buffer
DataOut	O	Response data buffer
Status	O	Execution status of the command

3.1.2 AC_SESSION

```
typedef     struct {
      BYTE  CardType;    // Card type selected
       BYTE SCModule;    // Selected security module.
                         //Use only when card type = AC_SCModule
      BYTE  ATRLen;      // Length of the ATR
      BYTE  ATR[128];    // ATR string
      BYTE  HistLen;     // Length of the Historical data
      BYTE  HistOffset; // Offset of the Historical data
                         // from the beginning of ATR
      INT16 APDULenMax; // Max. APDU supported
} AC_SESSION;
```

The AC_SESSION data structure is used in the AC_StartSession function call for the retrieval of ATR information from the smart card. Before calling AC_StartSession, the program needs to specify the value of CardType. After calling the function, the ATR string can be found in ATR field and the length is stored in ATRLen.

Name	Input/Output	Description
CardType	I	The card type selected for operation.
SCModule	I	The security module selected for operation.
ATRLen	O	Length of the ATR string
ATR	O	Attention to reset (ATR) string
HistLen	O	Obsolete field – not used anymore
HistOffset	O	Obsolete field – not used anymore
APDULenMax	O	Obsolete field - not used anymore

3.1.3 AC_INFO

```
typedef     struct {
      INT16 nMaxC;       // Maximum number of command data bytes
      INT16 nMaxR;       // Maximum number of data bytes that
                         // can be requested in a response
      INT16 CType;       // The card types supported by the reader
      BYTE  CStat;       // The status of the card reader
      BYTE  CSel;        // The current selection of card type
      BYTE  szRev[10];   // The 10 bytes firmware type and
                         // revision code
      INT16  nLibVer;    // Library version
      Long   lBaudRate; // Current Running Baud Rate
} AC_INFO;
```

The AC_INFO data structure is used in the AC_GetInfo function call for the retrieval of reader related information. Their meanings are described as follows:

Name	Input/Output	Description
nMaxC	O	The maximum number of command data byte (DataIn) that can be accepted in the ExchangeAPDU command
nMaxR	O	The maximum number of response data byte (DataOut) that will be appear in the ExchangeAPDU command
CType	O	The card types supported by the reader (For details, please look at the ACR20 reference manual)
Cstat	O	The status of the card reader Bit0 = card present (1) or absent (0) Bit1 = card powered up (1) or powered down (0)
szRev[10]	O	The firmware revision code
nLibVer	O	Library version (e.g. 310 is equal to version 3.10)

3.2 Interface Function Prototypes

Generally, a program is required to call AC_Open first to obtain a handle. The handle is required for subsequent calls to AC_StartSession, AC_ExchangeAPDU, AC_EndSession and AC_Close. The inserted card can be powered up by using the AC_StartSession function and card commands can be exchanged with the inserted card using the AC_ExchangeAPDU function. Moreover, AC_SetOptions and AC_GetInfo are two commands that can be used to set and read the various information of the reader.

3.2.1 AC_RescanBus

This function asks the system to rescan all the readers connected. Before calling it, all allocated handles (returned by AC_Open) should be released. It should be called for the system to detect and be able to connect to the new reader(s) connected by user.

Format:

INT16 AC_DECL AC_RescanBus();

Returns:

The return value is negative and contains the error code when the function encounters an error during operation. Otherwise, it returns 0.

3.2.2 AC_Open

This function opens a port and returns a valid reader handle for the application program.

Format:

INT16 AC_DECL AC_Open (INT16 ReaderType, INT16 ReaderPort);

Input Parameters:

The table below lists the parameters for this function (you can refer to ACR30.H for the corresponding value):

<table>
<tr><th>Parameters</th><th>Definition / Values</th></tr>
<tr><td>ReaderType</td><td>The target reader type:
<table>
<tr><th>Value</th><th>Meaning</th></tr>
<tr><td>ACR30</td><td>Target reader is ACR30</td></tr>
<tr><td>ACR_AUTODETECT</td><td>Auto detect the target reader</td></tr>
</table></td></tr>
<tr><td>ReaderPort</td><td>The port connected with the reader:
<table>
<tr><th>Value</th><th>Meaning</th></tr>
<tr><td>AC_COM1</td><td>Standard communication port 1</td></tr>
<tr><td>AC_COM2</td><td>Standard communication port 2</td></tr>
<tr><td>AC_COM3</td><td>Standard communication port 3</td></tr>
<tr><td>AC_COM4</td><td>Standard communication port 4</td></tr>
<tr><td>AC_USB</td><td>USB communication port</td></tr>
</table></td></tr>
</table>

Returns:

The return value is negative and contains the error code when the function encounters an error during operation. Otherwise, it returns a valid reader handle. Please refer to appendix A for the detailed description and meaning of the error codes.

Examples:

// open a port to a ACR30 reader connected to COM1
INT16 hReader;

```
hReader = AC_Open(ACR30,AC_COM1);
```

3.2.3 AC_Close

This function closes a previously opened reader port.

Format:

```
INT16 AC_DECL AC_Close (INT16 hReader);
```

Input Parameters:

The table below lists the parameters for this function

Parameter	Definition / Values
hReader	A valid reader handle previously opened by AC_Open

Returns :

The return value is zero if the function is successful. Otherwise, it returns a negative value containing the error code. For the detailed meaning of the error code, please refer to appendix A.

Examples :

```
// Close a previously opened port
INT16 RtnCode;
RtnCode = AC_Close(hReader);
```

3.2.4 AC_StartSession

This function starts a session with a selected card type and updates the session structure with the values returned by the card Answer-To-Reset (ATR). A session is started by a card reset and it is ended by either another card reset, a power down of the card or the removal of a card from the reader. Note that this function will power up the card and perform a card reset.

Format:

```
INT16 AC_DECL AC_StartSession (INT16 hReader, AC_SESSION FAR *Session);
```

Input Parameters:

The table below lists the parameters for this function

Parameters	Definition / Values
Hreader	A valid reader handle previously opened by AC_Open
Session.CardType	See table below

Value	Meaning
AC_AUTO	Auto-select T=0 or T=1 communication protocol
AC_GPM103	Gemplus GPM103 memory card
AC_SLE4406	Siemens SLE4406 memory card
AC_SLE4436	Siemens SLE4436 memory card
AC_SLE5536	Siemens SLE5536 memory card
AC_I2C_1K_16K	I2C memory card (1k, 2k, 4k, 8k and 16k bits)
AC_SLE4418	Infineon SLE4418
AC_SLE4428	Infineon SLE4428
AC_SLE4432	Infineon SLE4432
AC_SLE4442	Infineon SLE4442
AC_MCU_T0	MCU-based cards with T=0 communication protocol
AC_MCU_T1	MCU-based cards with T=1 communication protocol
AC_SAM_T0	SAM Slot MCU-based cards with T=0 communication protocol
AC_SAM_T1	SAM Slot MCU-based cards with T=1 communication protocol

Output Parameters:

The table below lists the parameters returned by this function

Parameters	Definition / Values
Session.ATR	Answer to Reset (ATR) returned by the card
Session.ATRLen	Length of the ATR

Returns:

The return value is zero if the function is successful. Otherwise, it returns a negative value containing the error code. For the detailed meaning of the error code, please refer to appendix A.

Examples:

```
// Prepare Session structure for SLE 4442 memory card
INT16   RtnCode,i;
AC_SESSION Session;

Session.CardType = AC_SLE4442;  // Card type = SLE4442

//Start a session on previously opened port
RtnCode = AC_StartSession(hReader, &Session);

// Print the card ATR
printf("Card Answer to Reset : ");
for (i = 0; i < (INT16) Session.ATRLen; i++)
        printf(" %02X",Session.ATR[i]);
```

Remarks:

1) When AC_AUTO is selected, the reader will try to detect the inserted card type automatically (in main slot). However, while the reader can distinguish the T=0 and T=1 card, it cannot distinguish different types of memory card.

2) For accessing the MCU card in SAM slot, besides opening a port, you may need to select the AC_SAM_T0 (for T=0 card) and AC_SAM_T1 (for T=1 card) in calling AC_StartSession.

3.2.5 AC_EndSession

This function ends a previously started session and powers off the card.

Format:

```
INT16 AC_DECL AC_EndSession (INT16 hReader);
```

Input Parameters:

The table below lists the parameters for this function

Parameters	Definition / Values
hReader	A valid reader handle returned by AC_Open()

Returns:

The return value is zero if the function is successful. Otherwise, it returns a negative value containing the error code. For the detailed meaning of the error code, please refer to appendix A.

Examples:

```
//End session on a previously started session
RtnCode = AC_EndSession(hReader);
```

3.2.6 AC_ExchangeAPDU

This function sends an APDU command to a card via the opened port and returns the card's response. Please refer Section 2.3.3 ACI Commands for a detailed description on how to fill in the parameters.

Format:

```
INT16 AC_DECL AC_ExchangeAPDU (INT16 hReader, AC_APDU FAR *Apdu);
```

Input Parameters:

The table below lists the parameters for this function

Parameters	Definition / Values
hReader	A valid reader handle returned by AC_Open()
Apdu.CLA	Instruction Class (Please refer Section 2.3.3 ACI Commands for detail description)
Apdu.INS	Instruction Code (Please refer Section 2.3.3 ACI Commands for detail description)
Apdu.P1	Parameter 1 (Please refer Section 2.3.3 ACI Commands for detail description)
Apdu.P2	Parameter 2 (Please refer Section 2.3.3 ACI Commands for detail description)
Apdu.DataIn	Data buffer to send
Apdu.Lc	Number of bytes in Apdu.DataIn to be sent
Apdu.Le	Number of bytes expected to receive

Output Parameters:

The table below lists the parameters returned by this function

Parameters	Definition / Values
Apdu.DataOut	Data buffer containing the card response
Apdu.Le	Number of bytes received in Apdu.DataOut
Apdu.Status	Status bytes SW1, SW2 returned by the card

Returns:

The return value is zero if the function is successful. Otherwise, it returns a negative value containing the error code. For the detailed meaning of the error code, please refer to appendix A.

Examples:

```
// Read 8 bytes from SLE4442 from address 0
INT16 RtnCode, i;
APDU  apdu;

apdu.CLA    = 0x00;
apdu.INS    = ACI_Read;
apdu.P1     = 0;
apdu.P2     = 0;
apdu.Lc     = 0;
apdu.Le     = 8;
  RTNCODE    = AC_EXCHANGEAPDU(HREADER, &APDU);
If (RtnCode == 0)
{
      // print the data
      printf("Data :");
      for (i = 0; i < apdu.Le; i++)
      {
            printf(" %02X", apdu.DataOut[i]);
```

```
        }
        printf("Card Status (SW1 SW2) = %04X", apdu.Status);
}
```

3.2.7 AC_GetInfo

This function retrieves information related to the currently selected reader.

Format :

```
INT16 AC_DECL AC_GetInfo (INT16 hReader, AC_INFO FAR *Info);
```

Input Parameters:

The table below lists the parameters for this function

Parameters	Definition / Values
hReader	A valid reader handle returned by AC_Open()
Info	Pointer to the AC_INFO structure

Output Parameters:

The table below lists the parameters returned by this function

Parameters	Definition / Values
Info.szRev	Revision code for the selected reader.
Info.nMaxC	The maximum number of command data bytes.
Info.nMaxR	The maximum number of data bytes that can be requested to be transmitted in a response
Info.Ctype	The card types supported by this reader
Info.Cstat	The current status of the reader:
Info.CSel	The currently selected card type
Info.nLibVer	Current library version. E.g. 310 means version 3.10
Info.lBaudRate	The current running baud rate

Info.Cstat:

Value	Meaning
00	No card Inserted
01	Card Inserted but Not Powered Up
03	Card Inserted and Powered Up

Returns:

The return value is zero if the function is successful. Otherwise, it returns a negative value containing the error code. For the detailed meaning of the error code, please refer to appendix A.

Examples:

```
// Get the revision code of the currently selected reader
INT16 RtnCode;
AC_INFO Info;

RtnCode = AC_GetInfo(hReader, &Info);
printf("Reader Operating System ID : %s",Info.szRev);
```

3.2.8 AC_SetOptions

This function sets various options for the reader.

Format:

INT16 AC_DECL AC_SetOptions (INT16 hReader, WORD16 Type, WORD16 Value);

Input Parameters:

The table below lists the parameters for this function

Parameter	Definition / Values
hReader	A valid reader handle returned by AC_Open()
Type	Type of options that is going to be set
Value	Value parameter for the selected option type

Returns:

The return value is zero if the function is successful. Otherwise, it returns a negative value meaning that the option setting is not available.

Options :

Type	Option	Value
ACO_SET_BAUD_RATE	Set the communication baud rate between the reader and the host	ACO_B9600 ACO_B14400 ACO_B19200 ACO_B28800 ACO_B38400 ACO_B57600 ACO_B115200
ACO_SET_BAUD_HIGHEST	Set the communication to highest baud rate.	0
ACO_SET_CHAR_DELAY	Set the communication inter character delay between the reader and the host	0 – 255
ACO_ENABLE_GET_RESPONSE	Enable the reader to issue the GET_RESPONSE command automatically (only valid for the MCU card)	SW1 + “00” (GET_RESPONSE will be issued automatically when this SW1 is returned from the card)
ACO_DISABLE_GET_RESPONSE	Disable the automatic issue of the GET_RESPONSE command (this is the default option of the reader).	0
ACO_EJECT_CARD	Eject the card	0
ACO_ENABLE_INIT_DO_PPS	Enable the reader to do PPS negotiation with the card in AC_StartSession.	0
ACO_DISABLE_INIT_DO_PPS	Disable the reader to do PPS negotiation with the card in AC_StartSession.	0

* Function returns 0 when that option is supported, otherwise it is not supported

Examples:

```
// Set the communication baud rate to the highest possible setting
INT16 RtnCode;

RtnCode = AC_SetOption(hReader, ACO_SET_BAUD_HIGHEST, 0);
if (RtnCode < 0)
      printf("Set option failed\n");
```

© Advanced Card Systems Ltd.

3.3 ACI Commands

ACI commands are provided to support the standard operations of a wide range of memory cards. Because of the different nature of different memory cards and their capabilities, not all commands are available to different types of cards. The table below lists the supported commands for different types of cards:

3.3.1 AC_GPM103 / AC_SLE4406 / AC_SLE4436 / AC_SLE5536

ACR30 reader with firmware 2.10 onwards supports AC_SLE4436 and AC_SLE5536.

3.3.1.1 ACI_Read

It is used to read data from certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Read	Instruction Code
P1	-	Don't Care
P2	Variable	Starting Address
Lc	0	No input data is required
DataIn	-	Don't Care
Le	Variable	Number of bytes to be read

The data read will be stored in DataOut field.

3.3.1.2 ACI_Write

It is used to write data to certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Write	Instruction Code
P1	-	Don't Care
P2	Variable	Starting Address
Lc	1	Only one byte can be written
DataIn	Data	Data to be written
Le	0	No response data expected.

3.3.1.3 ACI_WriteCarry

It is used to write data with carry to certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_WriteCarry	Instruction Code

P1	Mode	Carry Mode Value: AC_APDU_WRITECARRY_CARRY_WITHOUT_BACKUP — Meaning: Carry Value: AC_APDU_WRITECARRY_BACKUP_ONLY — Meaning: Backup Value: AC_APDU_WRITECARRY_CARRY_WITH_BACKUP — Meaning: Carry + Backup
P2	Variable	Starting Address
Lc	1	Only one byte can be written
DataIn	Data	Data to be written
Le	0	No response data expected.

3.3.1.4 ACI_Verify

It is used to submit transport code to the card in order to enable the card personalization mode.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Verify	Instruction Code
P1	-	Don't Care
P2	-	Don't Care
Lc	3	Transport code length (3 bytes)
DataIn	Data	Transport code (3 bytes)
Le	0	No response data expected.

3.3.1.5 ACI_Authenticate (For SLE4436 and SLE5536)

It is used to read a card authentication certification.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Authenticate	Instruction Code
P1	KEY	Key to be used for computation.
P2	CLK_CNT	Number of CLK pulses to be supplied to the card for computation.
Lc	6	Challenge data length (6 bytes)
DataIn	Data	Challenge data (6 bytes)
Le	2	Authentication data length (2 bytes)

The authentication data computed by the card will be stored in DataOut field.

For the KEY (P1), following values are available:

Value	Meaning	SLE4436	SLE5536
0x00	Key 1	Support	Support
0x01	Key 2	Support	Support
0x80	Key 1 with cipher block chaining	Not Support	Support
0x81	Key 2 with cipher block chaining	Not Support	Support

3.3.2 AC_I2C_1K_16K / AC_I2C_32K_1024K

3.3.2.1 ACI_Read

It is used to read data from certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Read	Instruction Code
P1	Variable	Starting Address (MSB)
P2	Variable	Starting Address (LSB)
Lc	0	No input data is required
DataIn	-	Don't Care
Le	Variable	Number of bytes to be read

The data read will be stored in DataOut field.

3.3.2.2 ACI_Write

It is used to write data to certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Write	Instruction Code
P1	Variable	Starting Address (MSB)
P2	Variable	Starting Address (LSB)
Lc	Variable	Number of byte to be written
DataIn	Data	Data to be written
Le	0	No response data expected.

3.3.3 SLE4418 / SLE4428

3.3.3.1 ACI_Read

It is used to read data from certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Read	Instruction Code
P1	Variable	Starting Address (MSB)

P2	Variable	Starting Address (LSB)
Lc	0	No input data is required
DataIn	-	Don't Care
Le	Variable	Number of bytes to be read

The data read will be stored in DataOut field.

3.3.3.2 ACI_Write

It is used to write data to certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Write	Instruction Code
P1	Variable	Starting Address (MSB)
P2	Variable	Starting Address (LSB)
Lc	Variable	Number of bytes to be written
DataIn	Data	Data to be written
Le	0	No response data expected.

3.3.3.3 ACI_WritePr

It is used to write protected data to certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_WritePr	Instruction Code
P1	Variable	Starting Address (MSB)
P2	Variable	Starting Address (LSB)
Lc	Variable	Number of bytes to be written
DataIn	Data	Data to be written
Le	0	No response data expected.

3.3.3.4 ACI_Verify [SLE4428 Only]

It is used to submit transport code to the card in order to enable the card personalization mode.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Verify	Instruction Code
P1	-	Don't care
P2	-	Don't care
Lc	2	Transport code length (2 bytes)
DataIn	Data	Transport code

Le	3	Error Count (1 bytes) + Transport code read from the card (2 bytes)

3.3.4 SLE4432 / SLE4442

3.3.4.1 ACI_Read

It is used to read data from certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Read	Instruction Code
P1	Variable	Starting Address (MSB)
P2	Variable	Starting Address (LSB)
Lc	0	No input data is required
DataIn	-	Don't Care
Le	Variable	Number of bytes to be read

The data read will be stored in DataOut field.

3.3.4.2 ACI_Write

It is used to write data to certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Write	Instruction Code
P1	Variable	Starting Address (MSB)
P2	Variable	Starting Address (LSB)
Lc	Variable	Number of bytes to be written
DataIn	Data	Data to be written
Le	0	No response data expected.

3.3.4.3 ACI_WritePr

It is used to write protected data to certain address.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_WritePr	Instruction Code
P1	Variable	Starting Address (MSB)
P2	Variable	Starting Address (LSB)
Lc	Variable	Number of bytes to be written
DataIn	Data	Data to be written
Le	0	No response data expected.

© Advanced Card Systems Ltd.

3.3.4.4 ACI_Verify [SLE4442 Only]

It is used to submit transport code to the card in order to enable the card personalization mode.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_Verify	Instruction Code
P1	-	Don't care
P2	-	Don't care
Lc	3	Transport code length (3 bytes)
DataIn	Data	Transport code
Le	4	Error Count (1 bytes) + Transport code read from the card (3 bytes)
DataOut	4	Byte 1 2 3 4 Data ErrCnt Transport Code

3.3.4.5 ACI_ChangePIN [SLE4442 Only]

It is used to change the PIN code stored in the card.

Field	Value	Description
CLA	0x00	Instruction Class
INS	ACI_ChangePIN	Instruction Code
P1	-	Don't care
P2	-	Don't care
Lc	3	New PIN code length (3 bytes)
DataIn	Data	New PIN code (3 bytes)
Le	0	No response data expected.

Appendix A: Table of error codes

Code	Meaning
-603	Error in the reader handle
-600	Session parameter is null
-108	No free handle left for allocation
-100	Selected port is invalid
-101	Selected reader is invalid
-102	Selected port is occupied
-1001	No card type selected
-1002	No card is inserted
-1003	Wrong card type
-1004	Card not powered up
-1005	INS is invalid
-1006	Card failure
-1007	Protocol error
-1008	Card type not supported
-1009	Incompatible command
-1010	Error in address
-1011	Data length error
-1012	Error in response length
-1013	Secret code locked
-1014	Invalid SC module number
-1015	Incorrect password
-1050	Error in CLA
-1051	Error in APDU parameters
-1052	Communication buffer is full
-1053	Address not align with word boundary
-1080	Protocol frame error
-1081	No response from reader
-1082	Error found in the calling function's parameters
-1083	Specified function not supported
-1084	Connector short circuit
-1085	Unexpected internal error
-1086	A required DLL file is missing
-1099	Unknown response
-2000	USB internal error
-2001	Error in memory allocation
-2002	Error in linking USB library
-2003	Error in locating window system directory
-3000	Error found in PCSC smart card manager

Copyright © 1996-2004 Advanced Card Systems Ltd. The information contained herein is subject to change without notice. Advanced Card Systems assumes no responsibility for the use of any circuitry other than circuitry embodied in an Advanced Card Systems product.